


# Easy LED PRO Flow Bird Spikes Installation instructions

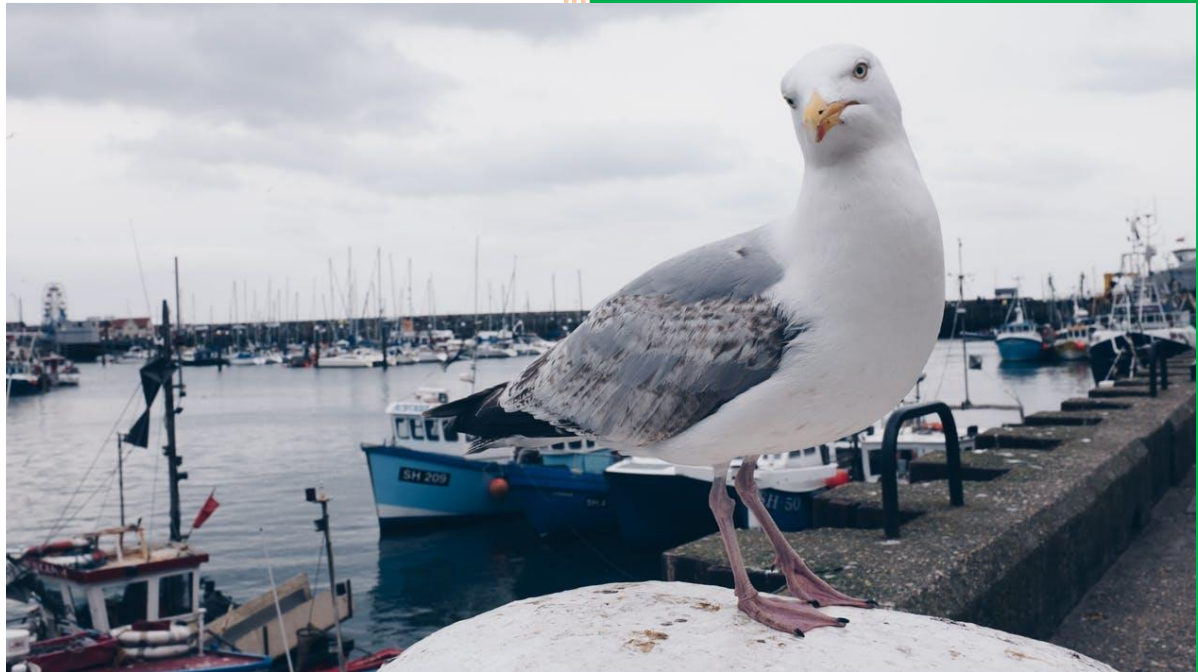

## PRO Flow Bird spikes installation instructions

PRO Flow S&M Bird spikes.....	2
PRO Flow L Bird spikes .....	3

### Material information:


- Spikes: Stainless steel
- Mounting frame: Galvanized Steel
- Screws: Stainless steel + Delta coating

*Cover photo: Cátia Matos*


## PRO Flow S&M Bird spikes

components:

- Bird spikes
- 4x M4x self-tapping screws

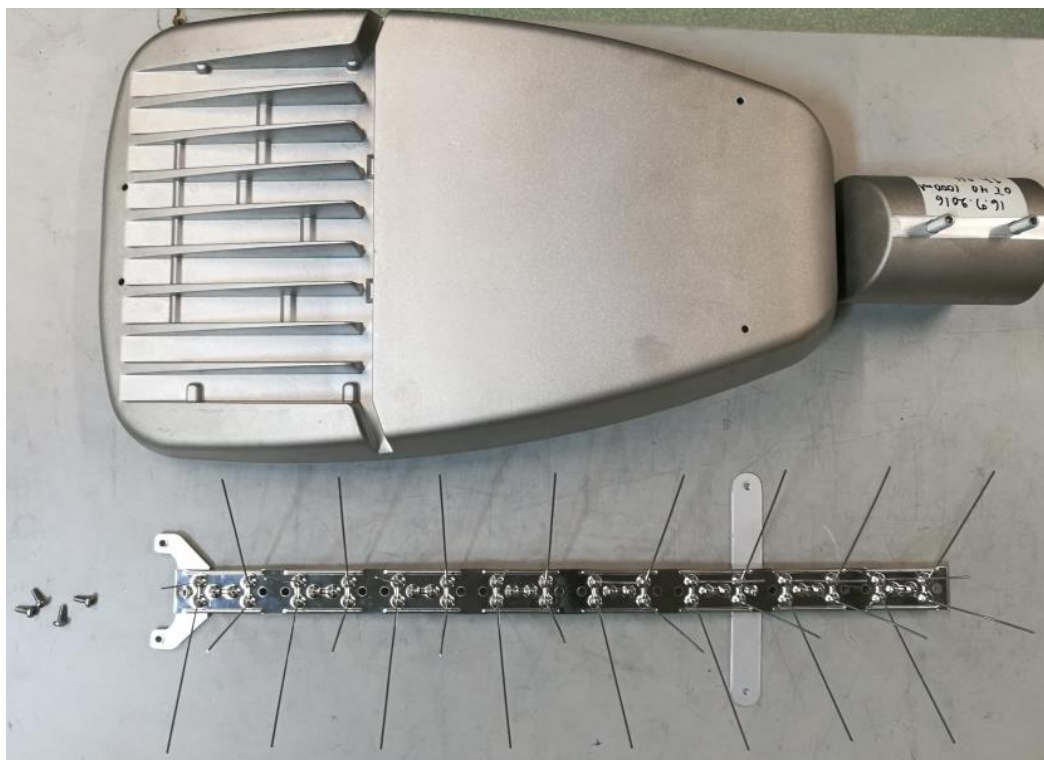


- Fasten the bird spikes with four M4 screws(**Torx20 3Nm**) as shown in picture below:

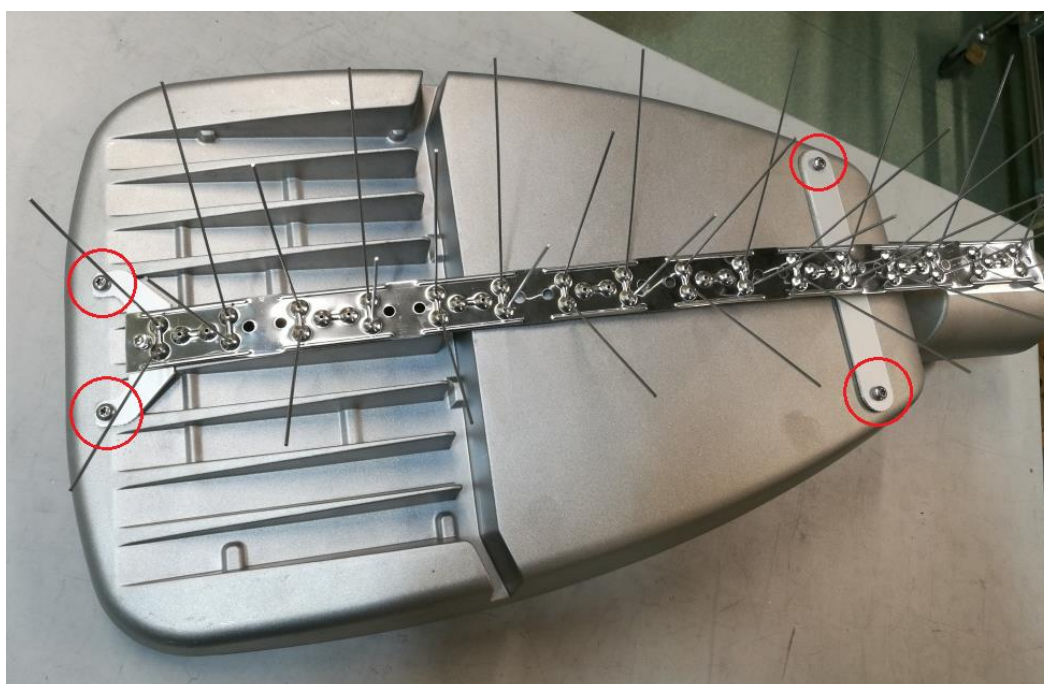


## PRO Flow L Bird spikes

components:

- Bird spikes
- 6x M4 self-tapping screws

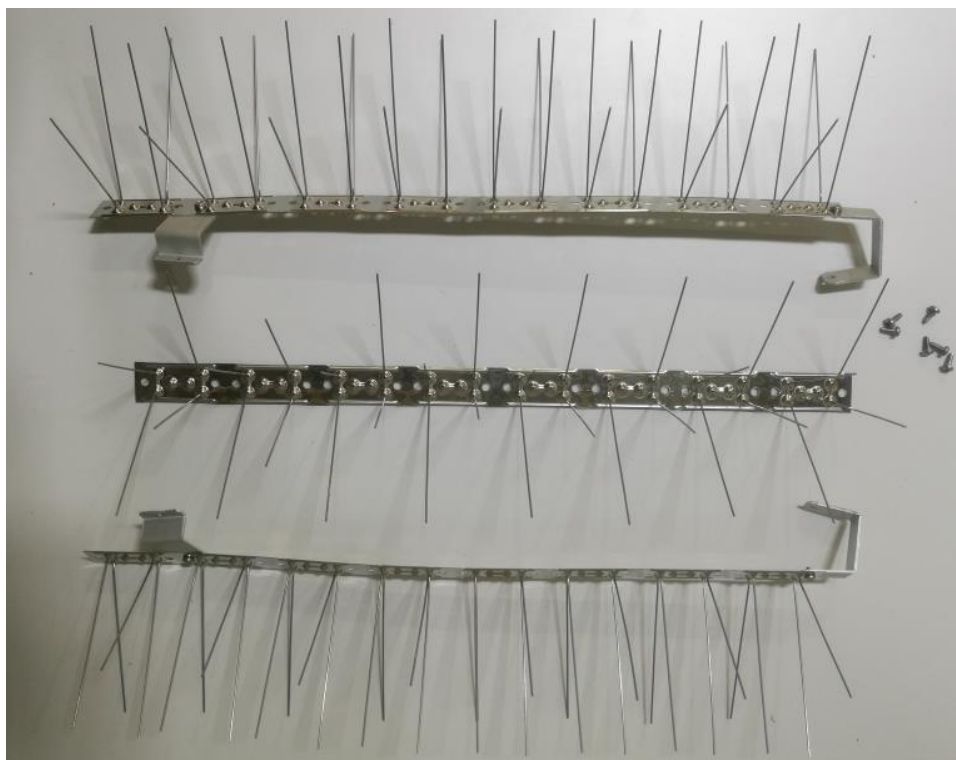

- **Step1:**Fasten the front bird spikes with two M4 screws(**Torx20 3Nm**) as shown in picture below:

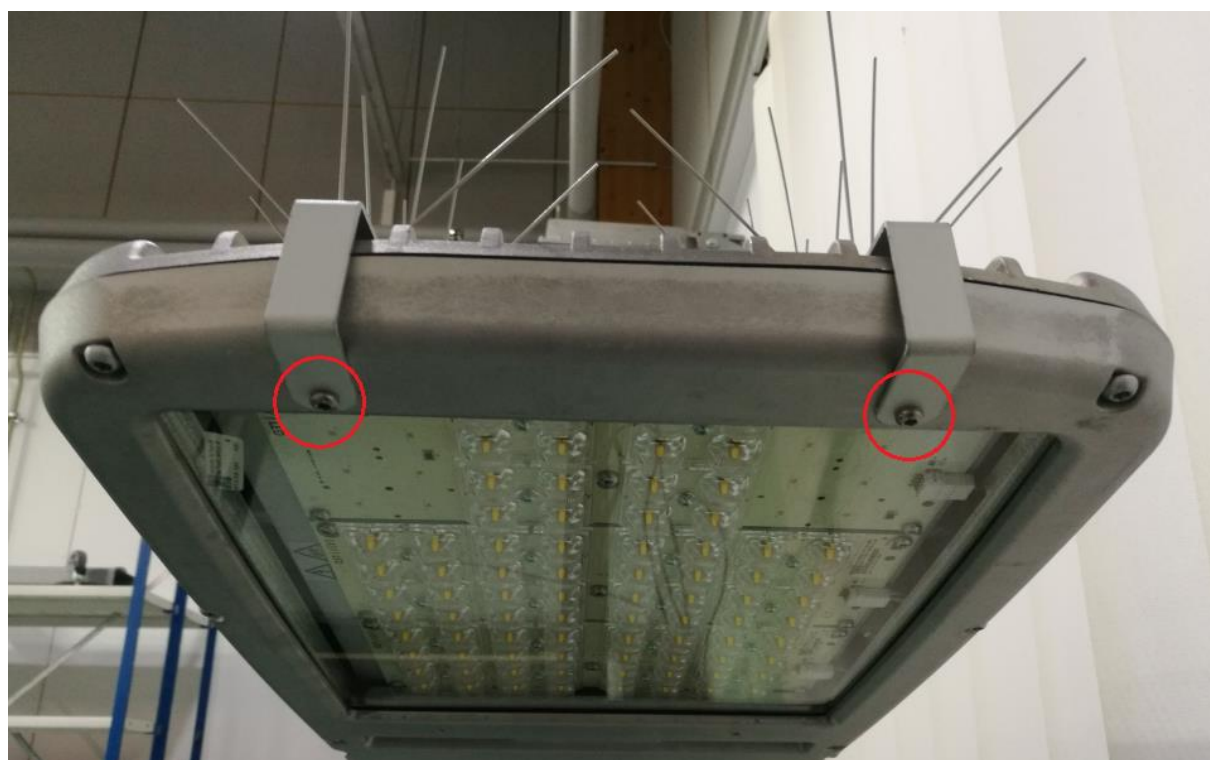

- **STEP2:** Fasten the front bird spikes with two M4 screws(**Torx20 3Nm**) as shown in picture below:



- **STEP3:** Fasten the back bird spikes with two M4 screws(**Torx20 3Nm**) as shown in picture below:
  - Cut the back bird spikes shorter or fasten to the pole if required

